



E70-433T series User Manual

CC1310 433MHz TTL

high-speed continuous transmission wireless module



Contents

DISCLAIMER	3
CHAPTER 1 PRODUCT OVERVIEW	4
1.1 PRODUCT INTRODUCTION	4
1.2 FEATURES	4
1.3 APPLICATION SCENARIOS	5
CHAPTER 2 SPECIFICATION PARAMETERS	5
2.1 RF PARAMETERS	5
2.2 ELECTRICAL PARAMETERS	6
2.3 HARDWARE PARAMETERS	6
CHAPTER 3 MECHANICAL DIMENSIONS AND PIN DEFINITIONS	8
3.1 E70-433T30S DIMENSIONAL DRAWING AND PIN DEFINITION	8
3.2 E70-433T14S DIMENSIONAL DRAWING AND PIN DEFINITION	11
3.3 E70-433T14S2 DIMENSIONAL DRAWING AND PIN DEFINITION	15
3.4 E70-433MT14S DIMENSIONAL DRAWING AND PIN DEFINITION	17
3.5 PRECAUTIONS	18
CHAPTER 4 RECOMMENDED WIRING DIAGRAMS	19
CHAPTER 5 DETAILED EXPLANATION OF FUNCTIONS	20
5.1 FIXED-POINT LAUNCH (1IN BASE 6)	20
5.2 BROADCAST TRANSMISSION (16 BASE)	21
5.3 BROADCAST ADDRESS	21
5.4 LISTENING ADDRESS	21
5.5 MODULE RESET	21
5.6 AUX IN DETAIL	22
5.6.1 Serial port data output indication	22
5.6.2 Wireless Transmission Indication	22
5.6.3 Module is in the process of being configured	23
CHAPTER 6 WORK MODES	24
6.1 MODE SWITCHING	24
6.2 RSSI MODE (MODE 0)	25
6.3 CONTINUOUS TRANSMISSION MODE (MODE 1)	25
6.4 SUBCONTRACTING MODE (MODE 2)	26
6.5 CONFIGURATION MODE (MODE 3)	26
6.6 WAKE MODE (MODE 4)	27
6.7 CONFIGURATION MODE (MODE 5)	27
6.8 POWER SAVING MODE (MODE 6)	27
6.9 SLEEP MODE (MODE 7)	28
CHAPTER 7 INSTRUCTION FORMAT	28
7.1 FACTORY DEFAULT PARAMETERS	28
7.2 WORKING PARAMETER READING	29
7.3 VERSION NUMBER READ	29
7.4 RESET COMMAND	29
7.5 PARAMETER SETTING INSTRUCTIONS	29

CHAPTER 8 PARAMETER CONFIGURATION	31
CHAPTER 9 SECONDARY DEVELOPMENT	32
9.1 PROGRAM BURNING	32
CHAPTER 10 HARDWARE DESIGN	32
CHAPTER 11 FREQUENTLY ASKED QUESTIONS	33
11.1 THE TRANSMISSION DISTANCE IS NOT IDEAL	33
11.2 MODULES ARE PRONE TO BREAKAGE	34
11.3 THE BIT ERROR RATE IS TOO HIGH	34
CHAPTER 12 WELDING OPERATION INSTRUCTIONS	34
12.1 REFLOW SOLDERING TEMPERATURE	34
12.2 REFLOW SOLDERING CURVE	35
CHAPTER 13 RELATED MODELS	36
CHAPTER 14 ANTENNA GUIDE	36
14.1 ANTENNA RECOMMENDATIONS	36
14.2 ANTENNA SELECTION	37
CHAPTER 15 BULK PACKAGING METHOD	37
15.1 E70-433T30S BULK PACKAGING	37
15.2 E70-433T14S BATCH PACKING	38
15.3 E70-433T14S2 BULK PACKAGING	39
15.4 E70-433MT14S BULK PACKING	39
REVISION HISTORY	40
ABOUT US	40

Disclaimer

EBYTE reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. Reproduction, use, modification or disclosure to third parties of this document or any part thereof without the express permission of EBYTE is strictly prohibited.

The information contained herein is provided “as is” and EBYTE assumes no liability for the use of the information. No warranty, either express or implied, is given, including but not limited, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by EBYTE at any time. For most recent documents, visit www.ebyte.com.

Chapter 1 Product Overview

1.1 Product introduction


E70-433T series is a wireless serial port module (UART) based on TI's CC1310 (built-in dual-core ARM) radio frequency chip, which can work in the 431-446.5 MHz frequency band (default 433MHz), GFSK modulation method, TTL level output, 3.3V IO port voltage; this product adopts 24MHz industrial-grade crystal oscillator to ensure its industriality and stability.

The module has data encryption and compression functions, and the data transmitted by the module in the air is random, and the data interception is meaningless through strict encryption and decryption algorithms. The data compression function has the possibility to reduce the transmission time, reduce the probability of being interfered, and improve reliability and transmission efficiency.

The factory has built-in low-power multi-function wireless serial port program, and users can also carry out secondary development according to their needs.




picture 1: E70-433T30S

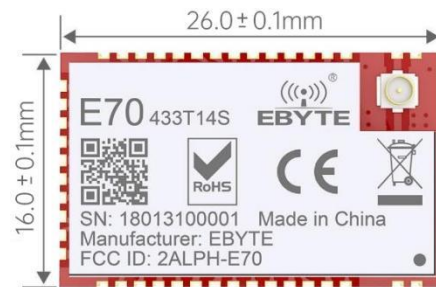

picture 2: E70-433T14S



picture 3: E70-433T14S2

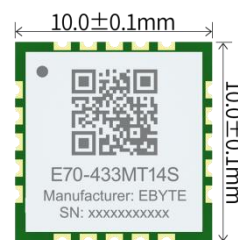

picture 4: E70-433MT14S

1.2 Features

- Support high-speed continuous transmission, send and receive unlimited data packet length;
- Support continuous data frame without packetization, perfect support for ModBus protocol;

- Support custom subcontracting settings to improve communication efficiency;
- Support fixed-point transmission/broadcast transmission/channel monitoring;
- Support RSSI signal strength reading;
- Support over-the-air wake-up, i.e. low-power function, suitable for battery-powered solutions;
- Developed based on CC1310 chip, built-in dual-core ARM;
- Ultra-small volume design;
- Ultra-low receiving current, only about 8mA;
- E70-433 T30S maximum transmit power of 30dBm, the other three models are 25mW, software multi-level adjustable;
- Under ideal conditions, the communication distance can reach 1.5km;
- E70-433T30S built-in PA+LNA, transmission power 1W, communication distance up to 6km;
- Supports the global license-free ISM 433MHz band;
- Support 2.5K~168kbps air transmission rate;
- Support 2.2~3.8V power supply, greater than 3.3V power supply can ensure the best performance;
- E70-433T30S supports 2.6~5.5V power supply, more than 5V power supply can ensure the best performance;
- Dual antenna optional (IPEX/stamp hole) is convenient for users to develop and facilitate integration.

1.3 Application scenarios

- Home security alarm and remote keyless entry;
- Smart home and industrial sensors;
- Wireless alarm security system;
- Building automation solutions;
- Wireless industrial-grade remote control;
- healthcare products;
- Advanced Meter Reading Architecture (AMI);
- Automotive applications.

Chapter 2 Specification Parameters

2.1 RF Parameters

RF parameters	unit	Model				remark
		E70-433T30S	E70-433T14S	E70-433T14S 2	E70-433MT14 S	
Transmit power	dBm	30	14	14	14	
Receive sensitivity	dBm	-107~-109	-109~-111	-108	-108	The air rate is 2.5kbps
Reference distance	M	6000m	1500m	1500m	1500m	Clear and open, antenna gain

						5dBi, antenna height 2.5 meters, air rate 2.5kbps
Operating frequency band	MHz	425~450.5				The factory default is 433MHz and supports the ISM band
Air velocity	bps	2.5k~168k				User programmatic control
Blocking power	dBm	10				The probability of burning is less when used at close range
Launch length	/	The transmission mode is specified				See Transfer Modes for details

2.2 Electrical parameters

Electrical parameters		unit	Model				remark
			E70-433T30S	E70-433T14S	E70-433T14S 2	E70-433MT1 4S	
Operating voltage		V	2.6~5.5	2.2~3.8	2.2~3.8	2.2~3.8	The E70-433T30S permanently burns modules over 5.5 V, and the other three models permanently burn modules over 3.8 V.
Communication level		V	3.3				Using 5V TTL carries a risk of burnout
power consumption	Emitted current	mA	530	27	36	32	Instantaneous power consumption
	Receive current	mA	14	8	8	9	
	Sleep current	μA	4	1	1.2	1.7	The software shuts down
temperature	Operating temperature	°C	-20~+85				Industrial grade
	Storage temperature		-40~+125				


2.3 Hardware Parameters

Hardware parameters	Model				remark
	E70-433T30S	E70-433T14S	E70-433T14S2	E70-433MT14S	
chip	CC1310				
Cache capacity	2048 Byte				User defined

FLASH	128 KB				
RAM	8 KB				
kernel	Cortex-M3 (MCU) +Cortex-M0 (RF)				
Communication interface	UART serial port				TTL level
Modulation method	GFSK				
Encapsulation method	SMD				
Antenna interface	IPEX/stamp hole	IPEX/stamp hole	IPEX/stamp hole	Stamp holes	The characteristic impedance is about 50 ohms
size	24*38.5mm	16*26 mm	14 * 20 mm	10*10mm	The E70-433T14S2 does not include SMA

Chapter 3 Mechanical dimensions and pin definitions

3.1 E70-433T30S dimensional drawing and pin definition

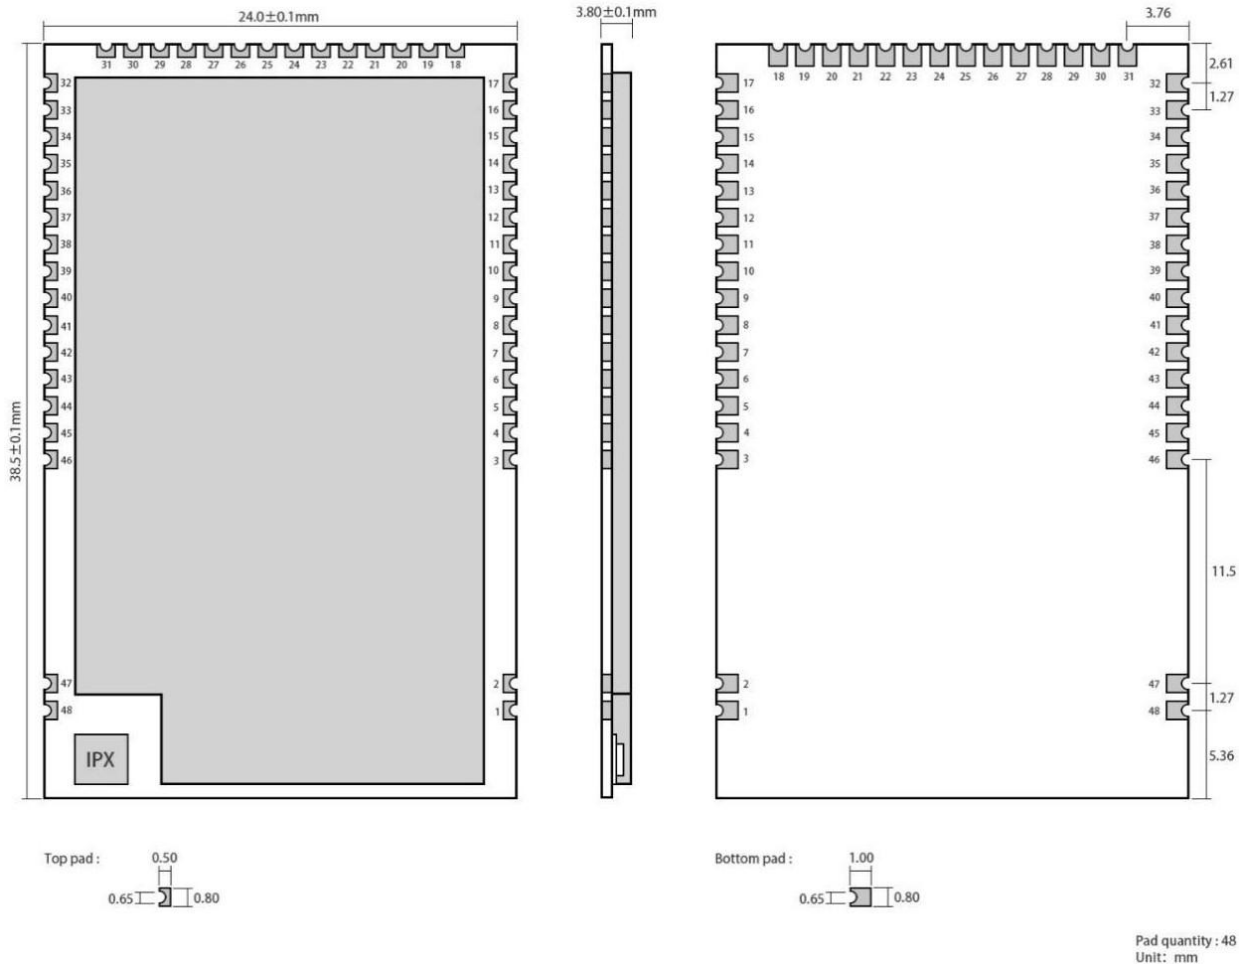


Pin serial number	Pin name	Pin orientation	Pin usage
1	GND	Referential	Module ground
2	GND	Referential	Module ground
3	GND	Referential	Module ground
4	NC	Reserved feet	The reservation is unused and needs to be left empty
5	NC	Reserved feet	The reservation is unused and needs to be left empty
6	NC	Reserved	The reservation is unused and needs to be left empty

		feet	
7	NC	Reserved feet	The reservation is unused and needs to be left empty
8	NC	Reserved feet	The reservation is unused and needs to be left empty
9	NC	Reserved feet	The reservation is unused and needs to be left empty
10	NC	Reserved feet	The reservation is unused and needs to be left empty
11	LNA_EN	output	Internal microcontroller controls LNA pins, active high, 44 pins connected
12	PA_EN	output	Internal microcontroller controls PA pins, active high, and connects 45 pins
13	NC	Reserved feet	The reservation is unused and needs to be left empty
14	NC	Reserved feet	The reservation is unused and needs to be left empty
15	NC	Reserved feet	The reservation is unused and needs to be left empty
16	M2	input	The combination of M2M1M0 determines the module's 8 operating modes, which require a 1K protection resistor in series
17	GND	Referential	Module ground
18	MO	input	The combination of M2M1M0 determines the module's 8 operating modes, which require a 1K protection resistor in series when used And add a pull-up resistor of 1M (not floating, if not groundable).
19	M1	input	The combination of M2M1M0 determines that a 1K protection resistor is connected in series for the use of the module's 8 operating modes, and And add a pull-up resistor of 1M (do not float, if not groundable).
20	RXD	input	TTL serial input, connected to an external TXD output pin. Can be configured as an open-drain or pull-up input , as detailed See Parameter Settings. A 1K protection resistor is required in series for use
21	TXD	output	TTL serial output, connected to an external RXD input pin. Can be configured as an open-drain or push-pull output , as detailed See Parameter Settings. A 1K protection resistor is required in series for use
22	TMSC	input	JTAG TMSC
23	TCKC	input	JTAG TCKC
24	RESET	input	Module reset pin, active low

25	NC	Reserved feet	The reservation is unused and needs to be left empty
26	NC	Reserved feet	The reservation is unused and needs to be left empty
27	AUX	output	Used to indicate module operating status, user wakes up external MCU, output low during POST initialization, configurable as open-drain output, or push-pull output, see parameter settings. A 1K protection resistor (which can be floated) is connected in series for use
28	VCC		Module power supply positive reference, voltage range: 2.6~5.5V DC
29	VCC		Module power supply positive reference, voltage range: 2.6~5.5V DC
30	GND	Referential	Module ground
31	GND	Referential	Module ground
32	NC	Reserved feet	The reservation is unused and needs to be left empty
33	NC	Reserved feet	The reservation is unused and needs to be left empty
34	NC	Reserved feet	The reservation is unused and needs to be left empty
35	NC	Reserved feet	The reservation is unused and needs to be left empty
36	NC	Reserved feet	The reservation is unused and needs to be left empty
37	NC	Reserved feet	The reservation is unused and needs to be left empty
38	NC	Reserved feet	The reservation is unused and needs to be left empty
39	NC	Reserved feet	The reservation is unused and needs to be left empty
40	NC	Reserved feet	The reservation is unused and needs to be left empty
41	NC	Reserved feet	The reservation is unused and needs to be left empty
42	NC	Reserved feet	The reservation is unused and needs to be left empty
43	NC	Reserved feet	The reservation is unused and needs to be left empty
44	LNA_EN	input	Internal LNA enable pin, active high, 11-pin connection
45	PA_EN	input	Internal PA enable pin, active high, 12-pin connection

46	GND	Referential	Module ground
47	GND	Referential	Module ground
48	ANT		Antenna (50 ohm characteristic impedance).

3.2 E70-433T14S dimensional drawing and pin definition

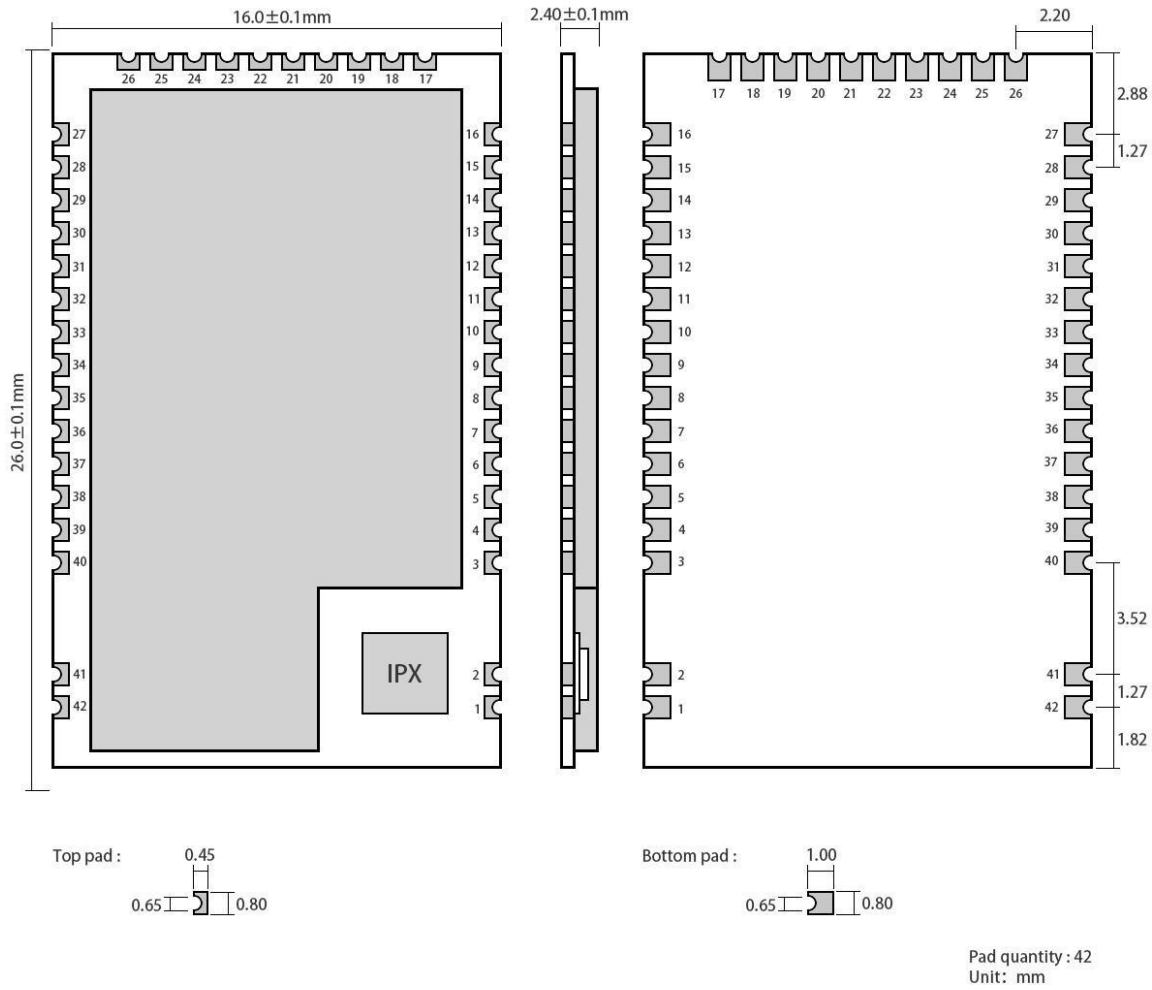


Pin serial number	Pin name	Pin orientation	Pin usage
1	GND	Referential	Module ground
2	ANT		Antenna (50 Ω characteristic impedance).

3	NC	Keep your feet	Leave unused, need to dangling
4	NC	Keep your feet	Leave unused, need to dangling
5	NC	Keep your feet	Leave unused, need to dangling
6	LNA_EN	output	External LNA control output, active high (floatable).
7	PA_EN	output	External PA control output, active high (floatable).
8	NC	Keep your feet	Leave unused, need to dangling
9	NC	Keep your feet	Leave unused, need to dangling
10	NC	Keep your feet	Leave unused, need to dangling
11	NC	Keep your feet	Leave unused, need to dangling
12	NC	Keep your feet	Leave unused, need to dangling
13	NC	Keep your feet	Leave unused, need to dangling
14	NC	Keep your feet	Leave unused, need to dangling
15	M2	input	M2, M1, M0 jointly determine the 8 working modes of the module; An external 1K protection resistor is required in series for use
16	GND	Referential	Module ground
17	M0	input	M2, M1, M0 jointly determine the 8 working modes of the module; An external 1K protection resistor is required in series for use And add a pull-up resistor of 1M (not floating, if not groundable).
18	M1	input	M2, M1, M0 jointly determine the 8 working modes of the module; An external 1K protection resistor is required in series for use

			And add a pull-up resistor of 1M (not floating, if not groundable).
19	RXD	input	TTL serial input, connected to an external TXD output pin; Can be configured as an open-drain or pull-up input, see parameter settings
20	TXD	output	TTL serial output, connected to external RXD input pin; Can be configured as an open-drain or push-pull output, see parameter settings
21	TMSC	input	JTAG TMS
22	TCKC	input	JTAG TCK
23	NC	Keep your feet	Leave unused, need to dangling
24	NC	Keep your feet	Leave unused, need to dangling
25	AUX	output	Indicates the working status of the module, the user wakes up the external MCU, the output is low during power-on self-test initialization, and can be configured as an open-drain output, or push-pull output, see parameter settings for details; An external 1K protection resistor (which can be floated) is required in series for use
26	VCC		Module power supply positive reference, voltage range: 2.2~3.8V DC
27	GND	Referential	Module ground
28	NC	Keep your feet	Leave unused, need to dangling
29	NC	Keep your feet	Leave unused, need to dangling
30	NC	Keep your feet	Leave unused, need to dangling
31	NC	Keep your feet	Leave unused, need to dangling
32	RESET	input	Module reset pin
33	NC	Keep your feet	Leave unused, need to dangling
34	NC	Keep	Leave unused, need to dangling

		your feet	
35	NC	Keep your feet	Leave unused, need to dangling
36	NC	Keep your feet	Leave unused, need to dangling
37	NC	Keep your feet	Leave unused, need to dangling
38	NC	Keep your feet	Leave unused, need to dangling
39	NC	Keep your feet	Leave unused, need to dangling
40	NC	Keep your feet	Leave unused, need to dangling
41	GND	Referential	Module ground
42	GND	Referential	Module ground


3.3 E70-433T14S2 dimensional drawing and pin definition

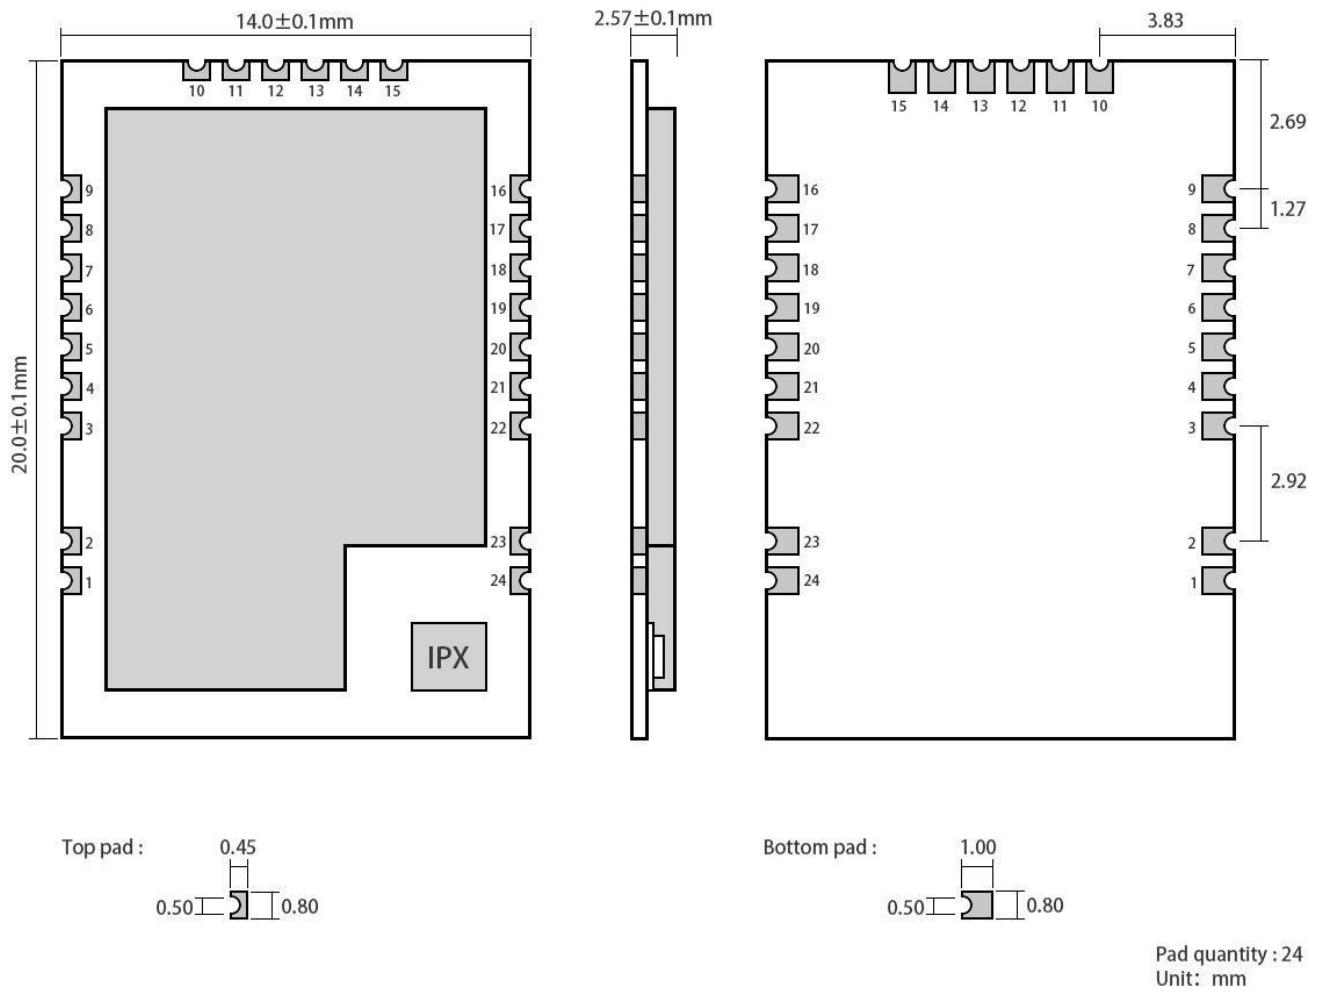


Pin serial number	Pin name	Pin orientat ion	Pin usage
1	GND	Referent ial	Module ground
2	GND	Referent ial	Module ground
3	GND	Referent ial	Module ground
4	NC	Keep your feet	Leave unused, need to dangling
5	NC	Keep your feet	Leave unused, need to dangling
6	NC	Keep your	Leave unused, need to dangling

		feet	
7	NC	Keep your feet	Leave unused, need to dangling
8	VCC		Module power supply positive reference, voltage range: 2.2~3.8V DC
9	GND	Referential	Module ground
10	GND	Referential	Module ground
11	PA_EN	output	External PA control output, active high (floatable).
12	LNA_EN	output	External LNA control output, active high (floatable).
13	M2	input	The combination of M2M1M0 determines the module's 8 operating modes, which require an external 1K protection resistor in series
14	RESET	input	Module reset pin, active low
15	GND	Referential	Module ground
16	AUX	output	It is used to indicate the working status of the module, the user wakes up the external MCU, and the output is low during power-on self-test initialization, which can be configured Set as an open-drain output, or push-pull output, see parameter settings (can be floated)
17	TXD	output	It can also be used as a TTL serial output, connected to an external RXD input pin; Can be configured as an open-drain or push-pull output, see parameter settings
18	TCKC	input	JTAG TCKC
19	TMSC	input	JTAG TMSC
20	RXD	input	TTL serial input, connected to an external TXD output pin; Can be configured as an open-drain or pull-up input, see parameter settings
21	M1	input	The M2M1M0 together determines the module's 8 operating modes (not floating, if groundable if not used).
22	M0	input	The M2M1M0 together determines the module's 8 operating modes (not floating, if groundable if not used).
23	GND	Referential	Module ground
24	ANT	antenna	50Ω characteristic impedance


3. 4 E70-433MT14S dimensional drawing and pin definition

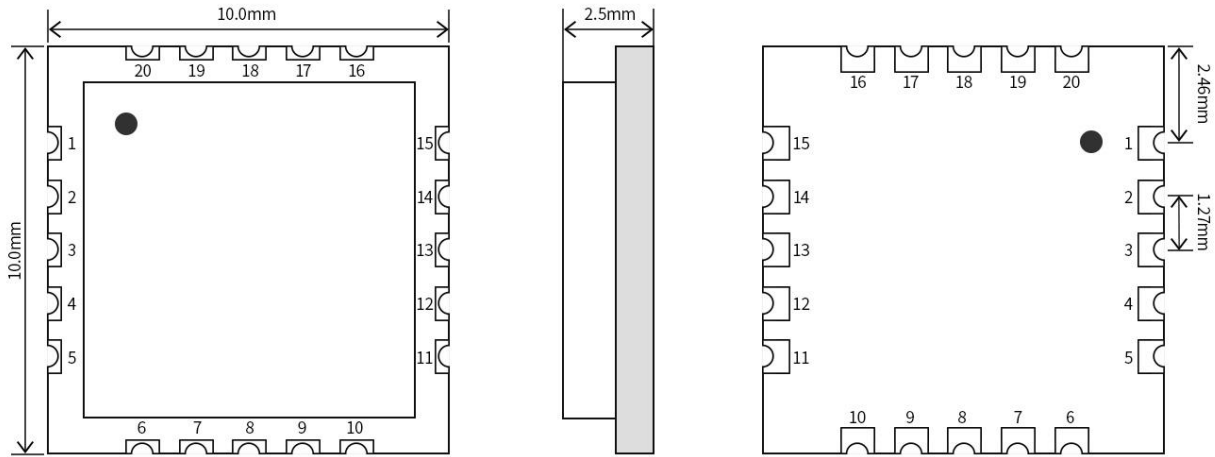

Top pad :



Bottom pad :



Unit : mm
 pad quantity : 20
 Tolerance value : X.X±0.1mm
 X.XX±0.05mm

Pin serial number	Pin name	Pin orientation	Pin usage
1	VCC	power supply	Module power supply positive reference, voltage range: 2.2~3.8V DC
2	GND	Referential	Ground, connected to the power supply reference ground
3	RESET	input	Module reset pin, active low
4	TCK	Input/output	Program download port, JTAG TCKC
5	TMS	Input/output	Program download port, JTAG TMSC
6	ANT	Input/output	Antenna interface, stamp hole (50Ω characteristic impedance).
7	GND	Referential	Ground, connected to the power supply reference ground
8	NC	Keep your feet	Leave unused, need to dangling
9	NC	Keep your feet	Leave unused, need to dangling
10	NC	Keep your feet	Leave unused, need to dangling
11	AUX	output	Used to indicate module operating status, user wakes up external MCU, output low during POST initialization, can be configured as open-drain output, or push-pull output, see parameter settings (can be floated).
12	TXD	output	It can also be used as a TTL serial output, connected to an external RXD input pin; Can be configured as an open-drain or push-pull output, see parameter settings
13	RXD	input	TTL serial input, connected to an external TXD output pin;


			Can be configured as an open-drain or pull-up input, see parameter settings
14	LNA_EN	output	External LNA control output, active high (floatable).
15	PA_EN	output	External PA control output, active high (floatable).
16	GND	Referential	Ground, connected to the power supply reference ground
17	NC	Keep your feet	Leave unused, need to dangling
18	M2	input	The combination of M2M1M0 determines the 8 operating modes of the module, and an external 1K protection resistor is required in series when used
19	M1	input	The combination of M2M1M0 determines the 8 operating modes of the module, and an external 1K protection resistor is required in series when used
20	M0	input	The combination of M2M1M0 determines the 8 operating modes of the module, and an external 1K protection resistor is required in series when used

3.5 Precautions

- This series of products can achieve pin compatibility, Pin to Pin replacement.
- The single-chip microcomputer control PA and LNA truth table is as follows:

state	PA_EN	LNA_EN
When launched	1	0
When receiving	0	1
When sleeping	0	0


Chapter 4 Recommended Wiring Diagrams

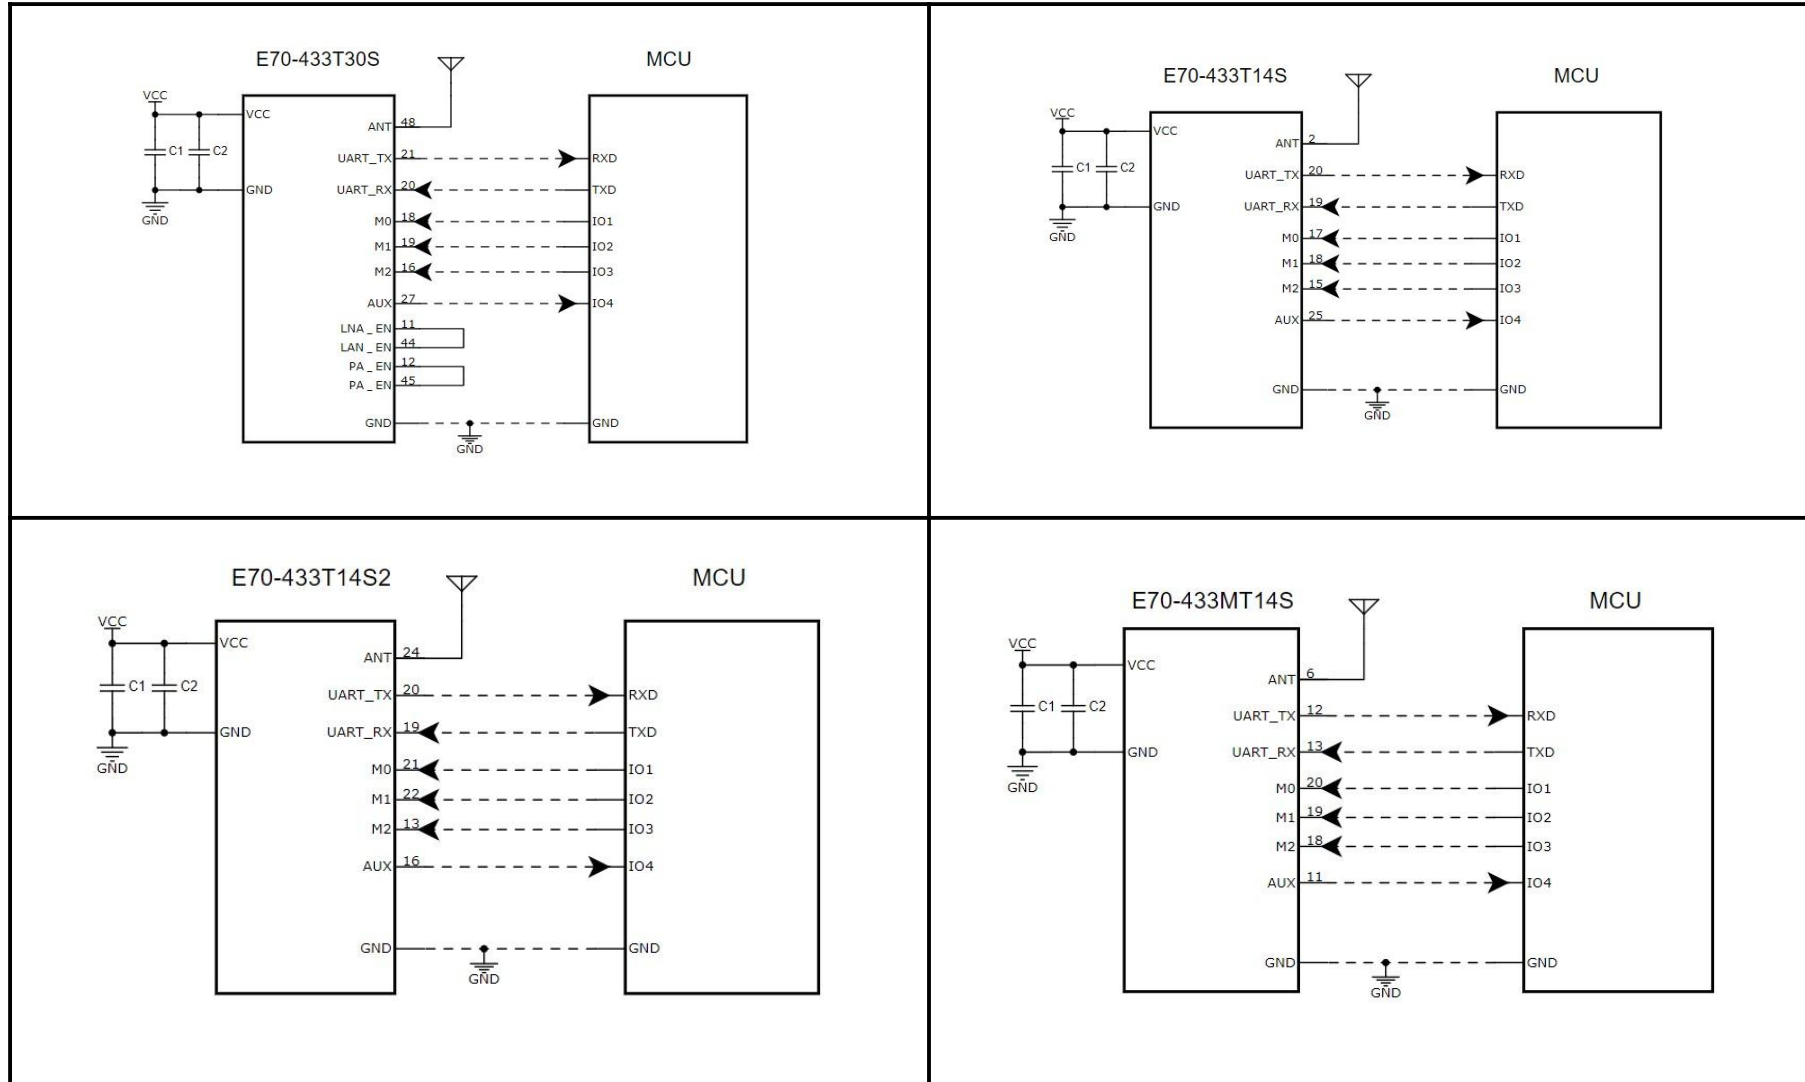


serial number	Brief connection description of the module and the MCU (the above figure takes the STM8L MCU as an example).
1	The wireless serial port module is TTL level, please connect with the TTL level MCU.
2	Some 5V MCUs may need to add 4~10K pull-up resistors to the TXD and AUX pins of the module.

Chapter 5 Detailed Explanation of Functions

5.1 Fixed-point launch (1in base 6).

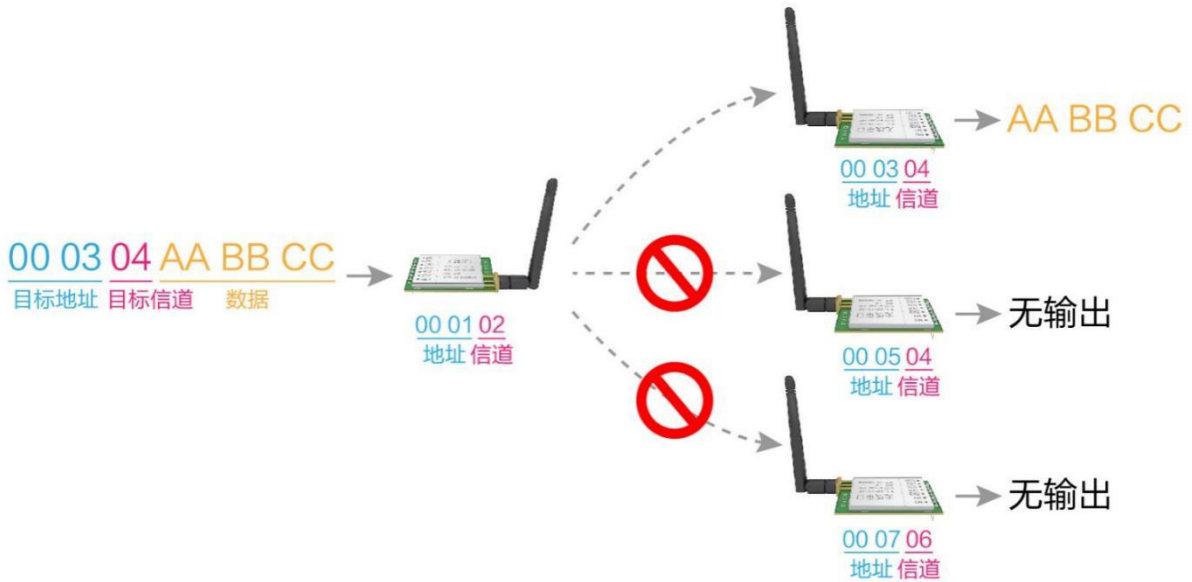

5.2 Broadcast transmission (16 base).

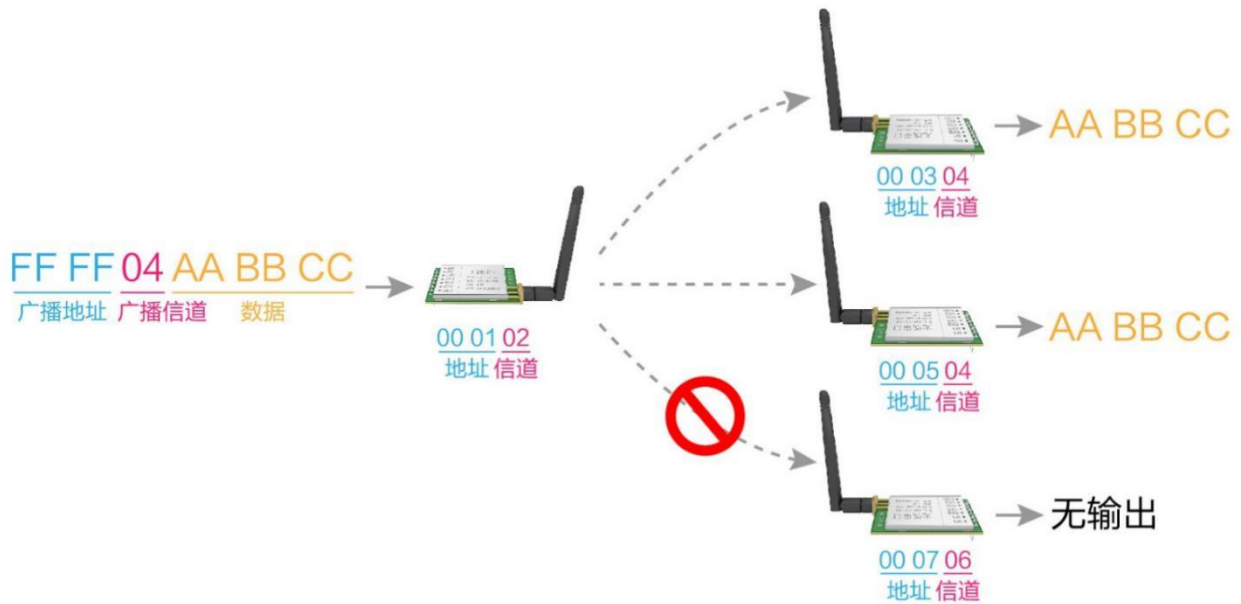

5.3 Broadcast Address

- Example: Set module A address to `0xFFFF` and channel to `0x04`.
- When module A is used as a transmitter (same mode, transparent transmission mode), all receiving modules under the `0x04` channel can receive data to achieve the purpose of broadcasting.

5.4 Listening address

- Example: Set module A address to `0xFFFF` and channel to `0x04`.
- When module A is received, all data under the `0x04` channel can be received to achieve the purpose of monitoring.


5.5 Module reset

- After the module is powered on, AUX will immediately output a low level, perform hardware self-test, and set the working mode according to user parameters;
During this process, AUX remains low, and after completion, AUX outputs a high level, and starts to work normally according to the working mode formed by the combination of M2, M1 and M0;
Therefore, the user needs to wait for the AUX rising edge as a starting point for the module to work normally.

5.6 AUX in detail

5.6.1 Serial port data output indication


- Used to wake up the external MCU in sleep (note that AUX indicates no delay in continuous transmission mode);

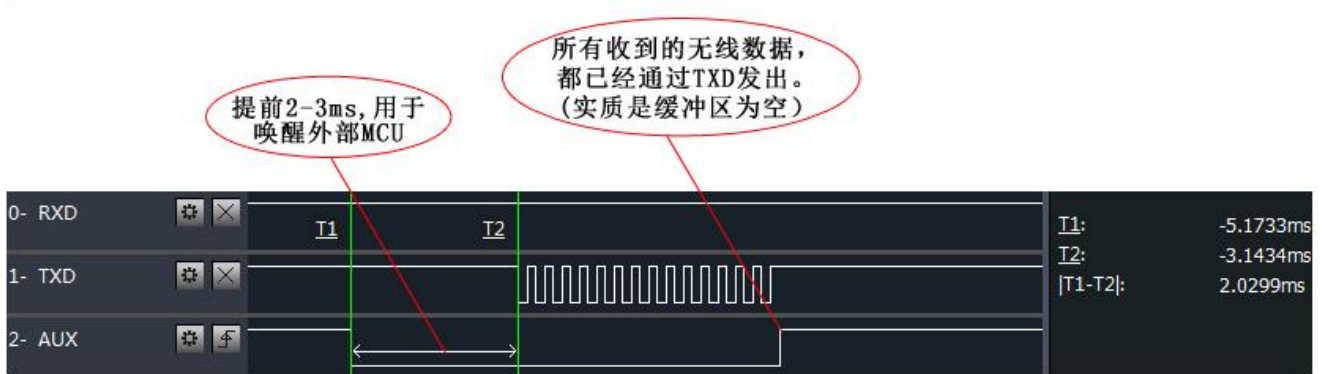

模块串口外发数据时，AUX引脚时序图

5.6.2 Wireless Transmission Indication

- In packet transmission mode, the internal buffer size is specified by the packet size, such as the packet length is set to 1024 bytes, the corresponding buffer size is 1024 bytes, and the user can continuously initiate no more than 1024 bytes of data when AUX=1;
- In continuous transmission mode, AUX=1 remains unchanged, and the length of user data input data is not limited;
- In WOR send mode, AUX=1 users can continuously initiate data less than 84 bytes;
- When AUX=1, it means that all serial port data of the module is transmitted wirelessly.

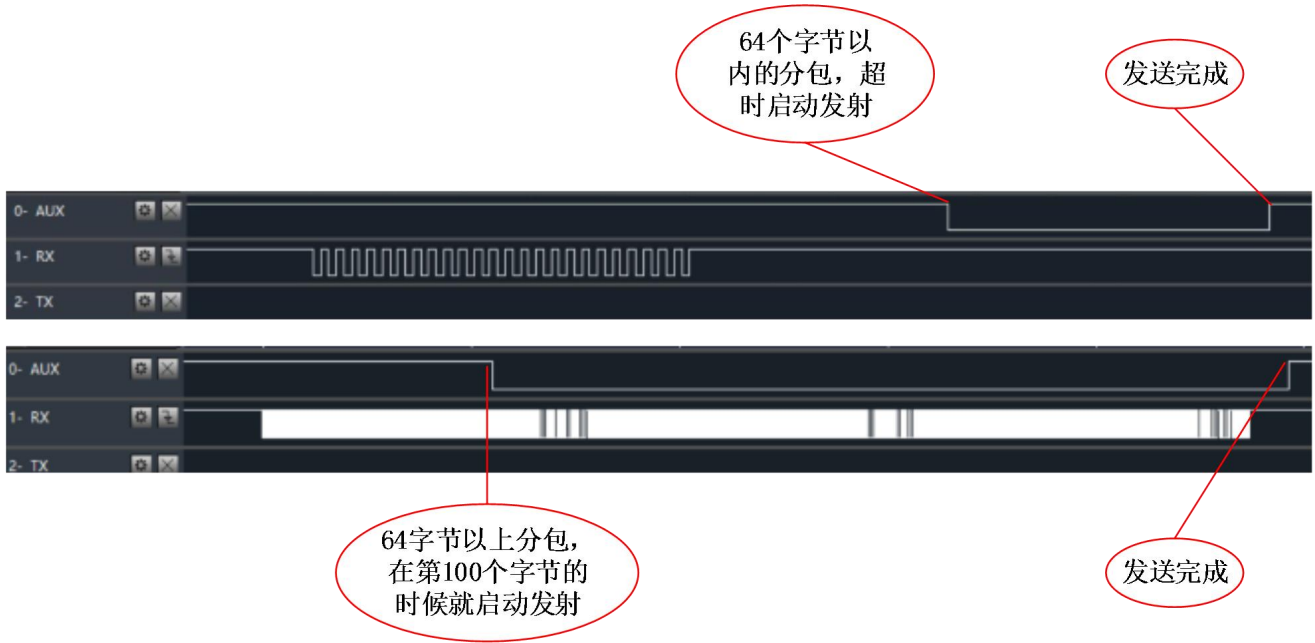


模块接收串口数据时, AUX引脚时序图 (分包模式)



模块接收串口数据时, AUX引脚时序图 (连传模式)

5.6.3 Module is in the process of being configured

- only when resetting and exiting sleep mode;

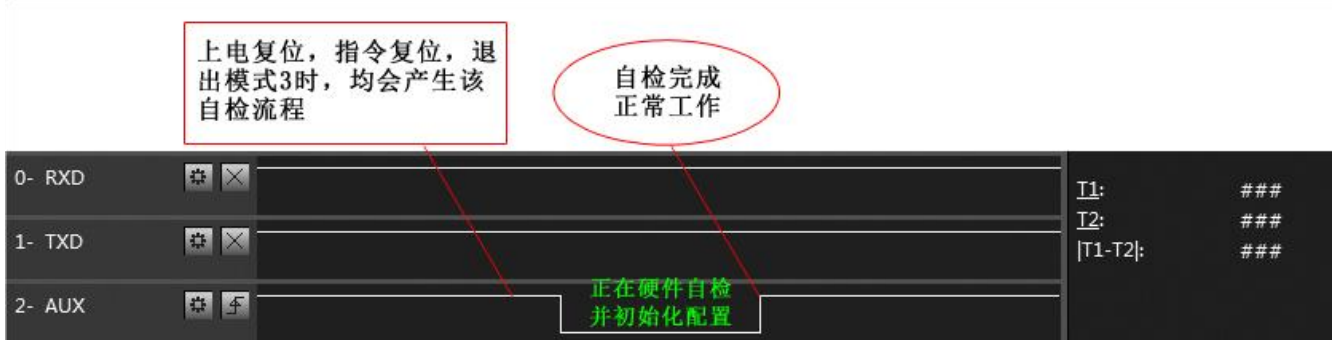

自检期间, AUX引脚时序图

Chapter 6 Work Modes

6.1 Mode switching

Mode (0-7).	M2	M1	M0	Schema introduction	remark
0 RSSI mode	0	0	0	The serial port is open, closed wirelessly, and cannot be transmitted	The module outputs RSSI intensity values every 100ms serial port
1 Continuous transmission mode	0	0	1	The serial port is opened, the wireless is opened, and the transmission is continuous and transparent	The airspeed is automatically adjusted with the baud rate, and the baud rate of both sides must be consistent. Suitable for high-speed continuous data
2 Subcontracting mode	0	1	0	The serial port is opened, the wireless is opened, and the subpacket is transmitted transparently	Airspeed and baud rate and independent configuration for packet communication.
3 Configuration mode	0	1	1	The serial port is open and closed wirelessly for parameter configuration	The baud rate is fixed at 9600 8N1
4 Wake mode	1	0	0	The serial port is opened, the wireless is opened, and the subpacket is transmitted transparently	This mode can not receive, automatically increase the wake code before transmission, Receiver in wake-up mode 6.
5 Same mode 3 (configuration mode).	1	0	1	The serial port is open and closed wirelessly for parameter configuration	The baud rate is fixed at 9600 8N1
6 Power saving mode	1	1	0	The serial port is closed, and it works wirelessly in WOR power-saving mode, and multiple time levels can be configured	This mode cannot transmit and can be woken up by the transmitter operating in mode 4 for low-power wireless reception
7 Sleep mode	1	1	1	The serial port is closed, wireless propagation, and sleep	Can be awakened by any falling edge of M2M1M0

- The user can combine the high and low levels of M2M1M0 to determine the module operating mode. The MCU's GPIO can be used to control mode switching; When changing M2M1M0: if the module is idle (AUX high), it can start working according to the new mode; If the module has serial port data that has not been transmitted wirelessly, it can enter the new working mode only after the transmission is completed; If the module receives wireless data and sends out data through the serial port, it needs to be sent before it can enter the new working mode; So the mode switch can only be used when AUX outputs 1, otherwise the switching will be delayed.
- For example, in mode 2 or mode 4, the user continuously enters a large amount of data and switches the mode at the same time, and the switching mode operation is invalid; The module will process all user data before performing new pattern detection; Therefore, the general recommendation is: detect the AUX pin output status, wait for the AUX output high level and then switch for 2ms.
- When the module is switched from other modes to configuration mode, if there is data that has not been processed; The

module will process this data, including sending and receiving, before entering sleep mode. This feature can be used for fast sleep, thus saving power consumption; For example: the transmitter module works in mode 0, the user initiates the serial port data "12345", and then does not have to wait for the AUX pin to be idle (high level), you can directly switch to sleep mode, and the user's main MCU immediately sleeps, the module will automatically send all the user data through the wireless Automatically enter sleep within 1ms; This saves the working time of the MCU and reduces power consumption.

- Similarly, any mode switch can take advantage of this feature, after the module processes the current mode event, within 1ms, it will automatically enter the new mode; Thus, the user's work of querying AUX is omitted, and the purpose of fast switching can be achieved; For example, switching from transmit mode to receive mode; The user MCU can also go to sleep early before the mode switch and use the external interrupt function to capture the AUX change for mode switching.
- This operation is very flexible and efficient, designed exactly for the user's MCU to operate, and can minimize the workload of the entire system, improve system efficiency, and reduce power consumption.

6.2 RSSI mode (mode 0).

state	M2、M1、M0 = 000
launch	Wireless data transmission is not possible.
reception	Wireless data reception is not possible.
Baud rate and airspeed	The current baud rate
merit	The module outputs a byte RSSI signal strength value at a timed 100ms for determining the noise value of the current environment.
shortcoming	Data sending and receiving is not possible
Applicable scenarios	Used to listen to ambient noise
note	not

6.3 Continuous transmission mode (mode 1).

state	M2、M1、M0 = 001
launch	Wireless data transmission is possible.
reception	Wireless data reception is possible.
Baud rate and airspeed	Based on the user's baud rate setting, the module automatically calculates the minimum airspeed required to meet continuous output requirements. Since modules with different airspeeds cannot communicate, the serial port parameter settings of both sides of the sending and receiving must be consistent.
merit	The serial data output of the wireless receiver is continuous, which meets the continuous transmission requirements of

	MODBUS and also meets the requirements of low time delay.
shortcoming	The baud rate of the serial port of both the sending and receiving parties must be consistent; After the serial baud rate is increased, the module will be adjusted to a higher airspeed, resulting in a decrease in reception sensitivity and a decrease in transmission distance.
Applicable scenarios	It is suitable for occasions where the distance requirements are not high, but the data continuity and response time are very high.
note	<ol style="list-style-type: none"> 1. The "wireless air rate" in the configuration instruction is invalid (SPED.210 bits), the software automatically calculates; 2. 0000 and FFFF are broadcast addresses that can be used for monitoring and broadcasting; 3. The addresses and baud rates of both communicating parties must be consistent; 4. Both transceiver modules must use the same model, such as E70 (868T14S) and E70 (868T30S) cannot communicate continuously.

6.4 Subcontracting mode (mode 2).

state	M2、M1、M0 = 010
launch	Wireless data transmission is possible.
reception	Wireless data reception is possible.
Baud rate and airspeed	In this mode, the serial port baud rate and airspeed are independent, and the sending and receiving parties can have different serial port baud rates, but must have the same airspeed setting.
merit	A very low airspeed can be set to achieve long-distance transmission, and the continuity between output data bytes depends on the module package length.
shortcoming	Depending on the setting, the airspeed can be set very low and the transmitter needs to wait for the number of packet length bytes or timeout bytes.
Applicable scenarios	Occasions where the distance requirements are high, and a certain output continuity is required, but the transmission rate is required to be low.
note	<ol style="list-style-type: none"> 1、Airspeed and baud rate are independent and their settings are in effect. 2、0000 and FFFF are broadcast addresses that can be used for monitoring and broadcasting. 3、The airspeed and address of both sides of the communication must be consistent, and the baud rate can be inconsistent. 4、The maximum packet data per packet is defined by the packet size [7:5] (excluding addresses and channels for directed sends).

6.5 Configuration Mode (Mode 3).

state	M2、M1、M0 = 011
launch	Wireless transmission is not possible, and the received serial port data will be discarded.
reception	Wireless reception is not possible.
disposition	It can be used for module parameter setting, using serial ports 9600, 8N1, to set module working parameters through a specific instruction format

note	When entering other modes from the setup mode, the module will reconfigure the parameters, and AUX will remain low during the configuration process; The output level is high after completion, so it is recommended that the user detect the rising edge of the AUX.
------	--

6.6 Wake mode (mode 4).

state	M2、 M1、 M0 = 100
launch	Wireless data transmission is possible.
reception	Wireless data reception is not possible.
Baud rate and airspeed	In this mode, the serial port baud rate and airspeed are independent, and the sending and receiving parties can have different serial port baud rates, but must have the same airspeed setting.
merit	Can wake up receivers operating in mode 6; The wake code is automatically increased before launch, and the number of increases depends on the wake-up time setting.
shortcoming	The transmission time is long, and it is only suitable for waking the receiver, not for conventional transmission data.
Applicable scenarios	Used to wake up receivers in WOR state.
note	In wake-up mode, the maximum transmit length of a single packet is 84 bytes (excluding directed addresses and channels).

6.7 Configuration Mode (Mode 5).

state	M2、 M1、 M0=101
launch	Wireless transmission is not possible, and the data of the serial port is regarded as a configuration instruction.
reception	Wireless reception is not possible.
disposition	It can be used for module parameter setting, using serial ports 9600, 8N1, to set module working parameters through a specific instruction format
note	When entering other modes from the setup mode, the module will reconfigure the parameters, and AUX will remain low during the configuration process; The output level is high after completion, so it is recommended that the user detect the rising edge of the AUX.

6.8 Power saving mode (mode 6).

state	M2、 M1、 M0 = 110
launch	No wireless data transmission.
reception	Wireless data reception is possible.
Baud rate and airspeed	In this mode, the serial port baud rate and airspeed are independent, and the sending and receiving parties can have different serial port baud rates, but must have the same airspeed setting.
merit	The module works in the WOR state, periodically automatically wakes up and listens to the air wireless packets, when

	the packet is heard, the module enters the receive mode and receives the whole packet, serial port output, and then enters the WOR state again. Power consumption can be greatly saved.
shortcoming	This mode cannot emit data, and when you need to emit data, you need to switch to another working mode.
Applicable scenarios	Devices that require high power consumption and need to receive data.
note	Only data from the transmitter of mode 4 can be received.

6.9 Sleep mode (mode 7).

state	M2、M1、M0 = 111
launch	Wireless data cannot be transmitted.
reception	Unable to receive wireless data.
other	All other functions of the module are turned off and can only exit sleep mode by state switching of M2M1M0.

Chapter 7 Instruction Format

- In the configuration mode (mode 3: M0=1, M1=1, M2=0), the list of supported instructions is as follows (when setting, only 9600, 8N1 format is supported):

serial number	Instruction format	Detailed description
1	C0+ operating parameters	The base 16 format sends C0+5 bytes of working parameters, a total of 6 bytes, which must be sent continuously (saved by power loss).
2	C1+C1+C1	Three C1s are sent in base 16 format, and the module returns saved parameters that must be sent consecutively.
3	C2+ operating parameters	The base 16 format sends C2+5 bytes of working parameters, a total of 6 bytes, which must be sent continuously (power down is not saved).
4	C3+C3+C3	The decimal format sends three C3s, and the module returns version information, which must be sent continuously.
5	C4+C4+C4	The decimal format sends three C4s, and the module will produce a reset that must be sent continuously.

7.1 Factory default parameters

Model	Factory default parameter value: C0 00 00 18 04 1C						
Module model	frequency	address	channel	Air velocity	baud rate	Serial port format	Transmit power
E70-433MT14S	433MHz	0x0000	0x04	2.5kbps	9600	8N1	25mW

7.2 Working parameter reading

Instruction format	Detailed description
C1+C1+C1	Under configuration (M0=1, M1=1, M2 =0), issue commands (HEX format) to the module serial port: C1 C1 C1, The module returns the current configuration parameters, such as: C0 00 00 18 4E 1C.

7.3 Version number read

Instruction format	Detailed description
C3+C3+C3	Under Configuration (M0=1, M1=1, M2 =0), issue the command (HEX format) to the module serial port: C3 C3 C3, and the module will return the current configuration parameters For example: C3 0070 XX1 XX2 XX3 XX4 XX5; The 70 here represents the module model E70 series, if it is 71, then the E71 series; XX1 is the version number, and XX2 XX3 XX4 XX5 refers to other features of the module.

7.4 Reset Command

Instruction format	Detailed description
C4+C4+C4	Under the configuration (M0=1, M1=1, M2 =0), issue a command (HEX format) to the module serial port: C4 C4 C4, and the module will generate a reset; During the reset process, the module performs a self-test, the AUX output is low, and after the reset is completed, the AUX output is high, and the module starts to work normally. At this point, you can switch modes or initiate the next instruction.

7.5 Parameter Setting Instructions

serial number	name	description	remark
0	HEAD	Fixed 0xC0 or 0xC2, indicating that this frame data is a control command	C0: The set parameters will be saved in power failure; C2: The set parameters will not be saved without power loss.
1	ADDH	Module address high byte (default 00H).	00H-FFH
2	ADDL	Module address low byte (default 00H).	00H-FFH

3	SPED	7	6	Serial port check digit		The serial port mode of the communication side can be different.	
		0	0	8N1 (default).			
		0	1	8O1			
		1	0	8E1			
		1	1	8N1 (equivalent 00).			
		5	4	3	TTL serial port baud rate (bps).		The baud rate of the two sides of the communication can be different;
		0	0	0	The serial port baud rate is 1200		
		0	0	1	The serial port baud rate is 2400		
		0	1	0	The serial port baud rate is 4800		
		0	1	1	The serial port baud rate is 9600 (default).		
		1	0	0	The serial port baud rate is 19200		
		1	0	1	The serial port baud rate is 38400		
		1	1	0	The serial port baud rate is 57600		
		1	1	1	The serial port baud rate is 115200		
		2	1	0	Wireless air rate (bps).		The lower the air speed, the farther the distance, the stronger the anti-interference performance, and the longer the transmission time;
		0	0	0	The air speed is 2.5k (default).		
		0	0	1	The air rate is 5k		
		0	1	0	The air rate is 12k		
		0	1	1	The air rate is 28k		
1	0	0	The air rate is 64k				
1	0	1	The air speed is 168k				
1	1	0	The air speed is 168k				
1	1	1	The air speed is 168k				
4	CHAN	7	6	5	Package length setting (subcontracting mode only)		In continuous transmission mode (M2, M1, M0 = 001), this parameter is invalid.
		0	0	0	16 bytes		
		0	0	1	32 bytes		
		0	1	0	64 bytes (default).		
		0	1	1	128 bytes		
		1	0	0	256 bytes		
		1	0	1	512 bytes		
		1	1	0	1024 bytes		
		1	1	1	2048 bytes		
		Communication channel					
00H~1FH, corresponding to 431~446.5MHz							
5	OPTION	7	FIXED-POINT TRANSMIT ENABLE BIT (MODBUS-LIKE).			is 1, the first 3 bytes of each user data frame serve as high, low, channel; When transmitting, the module changes its own address and channel, and after completion, it restores the original settings; The continuous transmission mode is transparent	
		0	Transparent transmission (default)				
		1	Fixed-point transmission				

					transmission.
	6	5	4	Wake-up time	<p>This parameter is only valid for modes 4 and 6;</p> <p>For mode 6, the wake-up time affects the WOR period of the module and has a large impact on power consumption.</p> <p>For mode 4, the wake-up time determines the number of wake-up codes that the module increases before launching, so as to ensure that the module in mode 6 is effectively awakened;</p> <p>Generally speaking, modes 4 and 6 need to be used together, and the wake-up time set by both parties must be consistent.</p>
	0	0	0	500ms	
	0	0	1	1000ms (default).	
	0	1	0	1500ms	
	0	1	1	2000ms	
	1	0	0	2500ms	
	1	0	1	3000ms	
	1	1	0	3500ms	
	1	1	1	4000ms	
	3	FEC switch (forward error correction).			<p>After the FEC is turned off, the actual data transmission rate is increased, but the anti-interference ability is weakened, and the distance is slightly closer, which is selected according to the actual application;</p> <p>Both parties to the communication must be on or off.</p>
	0	Turn off the FEC			
	1	Open FEC (default).			
	2	IO drive mode			<p>This bit is used to enable the internal pull-up resistor of the module;</p> <p>Open-drain mode is more level adaptable, and external pull-up resistors may be required in some cases.</p>
	0	TXD, AUX open output, RXD open input			
	1	TXD, AUX push-pull output, RXD pull-up input (default).			
	1	0	Transmit power		<p>The external power supply must provide a current output capability of more than 80mA and ensure that the power supply ripple is less than 100mV;</p> <p>It is not recommended to use smaller power transmission, and its power utilization efficiency is not high.</p>
	0	0	14dBm (default).		
	0	1	10dBm		
	1	0	7dBm		
	1	1	4dBm		

Give an example (the meaning of the ordinal number 3 "SPED" byte).

The binary bit of the byte	7	6	5	4	3	2	1	0
Specific value (user configuration)	0	0	0	1	1	0	0	0
Representative meaning	Serial port check digit 8N1		The serial port baud rate is 9600			The air rate is 2.5k		
Corresponds to hexadecimal	0				18			

Chapter 8 Parameter Configuration

- When the module is in mode 3 (M2, M1, M0 = 011) or mode 5 (M2, M1, M0 = 101), you can configure the module

parameters through instructions or host computer software, and please visit www.ebyte.com download for supporting host computer software.



Chapter 9 Secondary Development

- The module supports secondary development, CC1310 RF chip, users can carry out secondary development according to the product pin description required in **Chapter 3** of this article;
- Ebyte can customize function development for customers, please contact the sales hotline 4000-330-990 .

9.1 Program Burning

keywords	Precautions
Programming procedures	<p>The module is an SoC module, with its own GPIO port, and the program downloads using a CC series dedicated downloader : JTAG downloader (or TI official CC1310 supporting development board), can not use serial port or any other ISP, ICP tools.</p> <p>The figure below shows a JTAG connection diagram (XDS100), and the specific development method is detailed in the relevant documents of Ti (where the TDI and TDO pins can not be connected). .</p>

Chapter 10 Hardware Design

- It is recommended to use a DC regulated power supply to supply the module, the power supply ripple coefficient is as small as possible, and the module needs to be reliably grounded;

- Please pay attention to the correct connection of the positive and negative poles of the power supply, such as reverse connection may cause permanent damage to the module;
- Please check the power supply to ensure that between the recommended supply voltages, if the maximum value is exceeded, the module will be permanently damaged;
- Please check the stability of the power supply, the voltage can not fluctuate sharply and frequently;
- When designing the power supply circuit for the module, it is often recommended to retain more than 30% of the margin, which is conducive to long-term stable work;
- The module should be as far away as possible from the power supply, transformer, high-frequency wiring and other parts with large electromagnetic interference;
- High-frequency digital traces, high-frequency analog wiring, power traces must avoid the bottom of the module, if it is really necessary to pass under the module, assuming that the module is welded in the Top Layer, the Top Layer of the module contact part is covered with copper (all copper is laid and well grounded), must be close to the digital part of the module and routed in Bottom Layer;
- Assuming that the module is soldered or placed in the Top Layer, it is also wrong to route the wire at will in the Bottom Layer or other layers, which will affect the spurious and receiving sensitivity of the module to varying degrees;
- Assuming that there are devices with large electromagnetic interference around the module will also greatly affect the performance of the module, it is recommended to stay away from the module appropriately according to the intensity of interference, and if the situation permits, appropriate isolation and shielding can be done;
- Assuming that there are traces with large electromagnetic interference around the module (high-frequency digital, high-frequency analog, power wiring) will also greatly affect the performance of the module, it is recommended to stay away from the module appropriately according to the intensity of interference, and if the situation permits, appropriate isolation and shielding can be done;
- If the communication line uses 5V level, 1k-5.1k resistors must be connected in series (not recommended, there is still a risk of damage);
- Try to stay away from some TTL protocols that are also 2.4GHz at the physical layer, such as USB3.0;
- The antenna installation structure has a great impact on the performance of the module, so it is necessary to ensure that the antenna is exposed and preferably vertically upward;
- When the module is installed inside the case, a high-quality antenna extension cable can be used to extend the antenna to the outside of the case;
- The antenna must not be installed inside the metal case, which will greatly weaken the transmission distance.

Chapter 11 Frequently Asked Questions

11.1 The transmission distance is not ideal

- When there is a straight-line communication barrier, the communication distance will be attenuated accordingly;
- Temperature, humidity, and co-frequency interference will lead to an increase in the communication packet loss rate;
- The ground absorbs and reflects radio waves, and the test effect close to the ground is poor;
- Seawater has a strong ability to absorb radio waves, so the seaside test effect is poor;
- If there is a metal object near the antenna, or placed in a metal case, the signal attenuation will be very serious;
- power register setting error, air rate setting too high (the higher the air speed, the closer the distance);
- At room temperature, the low voltage of the power supply is lower than the recommended value, and the lower the

voltage, the smaller the power;

- The use of antennas is poorly matched with the module or the quality of the antenna itself is a problem.

11.2 Modules are prone to breakage

- Please check the power supply to ensure that between the recommended supply voltages, if the maximum value is exceeded, the module will be permanently damaged;
- Please check the stability of the power supply, the voltage can not fluctuate sharply and frequently;
- Please ensure that the installation and use process anti-static operation, high-frequency device electrostatic sensitivity;
- Please ensure that the humidity during installation and use should not be too high, and some components are humidity-sensitive devices;
- If there is no special need, it is not recommended to use it at too high or too low temperature.

11.3 The bit error rate is too high

- There is co-frequency signal interference nearby, stay away from the source of interference or modify the frequency and channel to avoid interference;
- The power supply is not ideal, it may also cause garbled codes, and the reliability of the power supply must be guaranteed;
- Poor quality or long extension cables and feeders will also cause high bit error rates.


Chapter 12 Welding Operation Instructions

12.1 Reflow soldering temperature

Reflow curve features		There is lead process assembly	Lead-free process assembly
Preheating/insulation	Minimum temperature (T _{smin}).	100°C	150°C
	Maximum temperature (T _{smax}).	150°C	200°C
	Time (T _{smin} ~T _{smin}).	60-120 seconds	60-120 seconds

Heating slope ($T_L \sim T_p$).	3°C/sec, maximum	3°C/sec, maximum
Liquid phase temperature (T_L).	183°C	217°C
Hold time above T_L	60~90 seconds	60~90 seconds
The peak temperature of the package body is T_p	The user must not exceed the temperature indicated on the product's "Moisture Sensitivity" label.	The user must not exceed the temperature indicated on the product's "Moisture Sensitivity" label.
The time (T_p) within 5°C of the specified grading temperature (T_c) is shown in the figure below	20 seconds	30 seconds
Cooling slope ($T_p \sim T_L$).	6 °C/sec, max	6 °C/sec, max
Time from room temperature to peak temperature	6 minutes, the longest	8 minutes, the longest
*The peak temperature (T_p) tolerance definition of the temperature curve is the upper limit for the user		

12.2 Reflow soldering curve

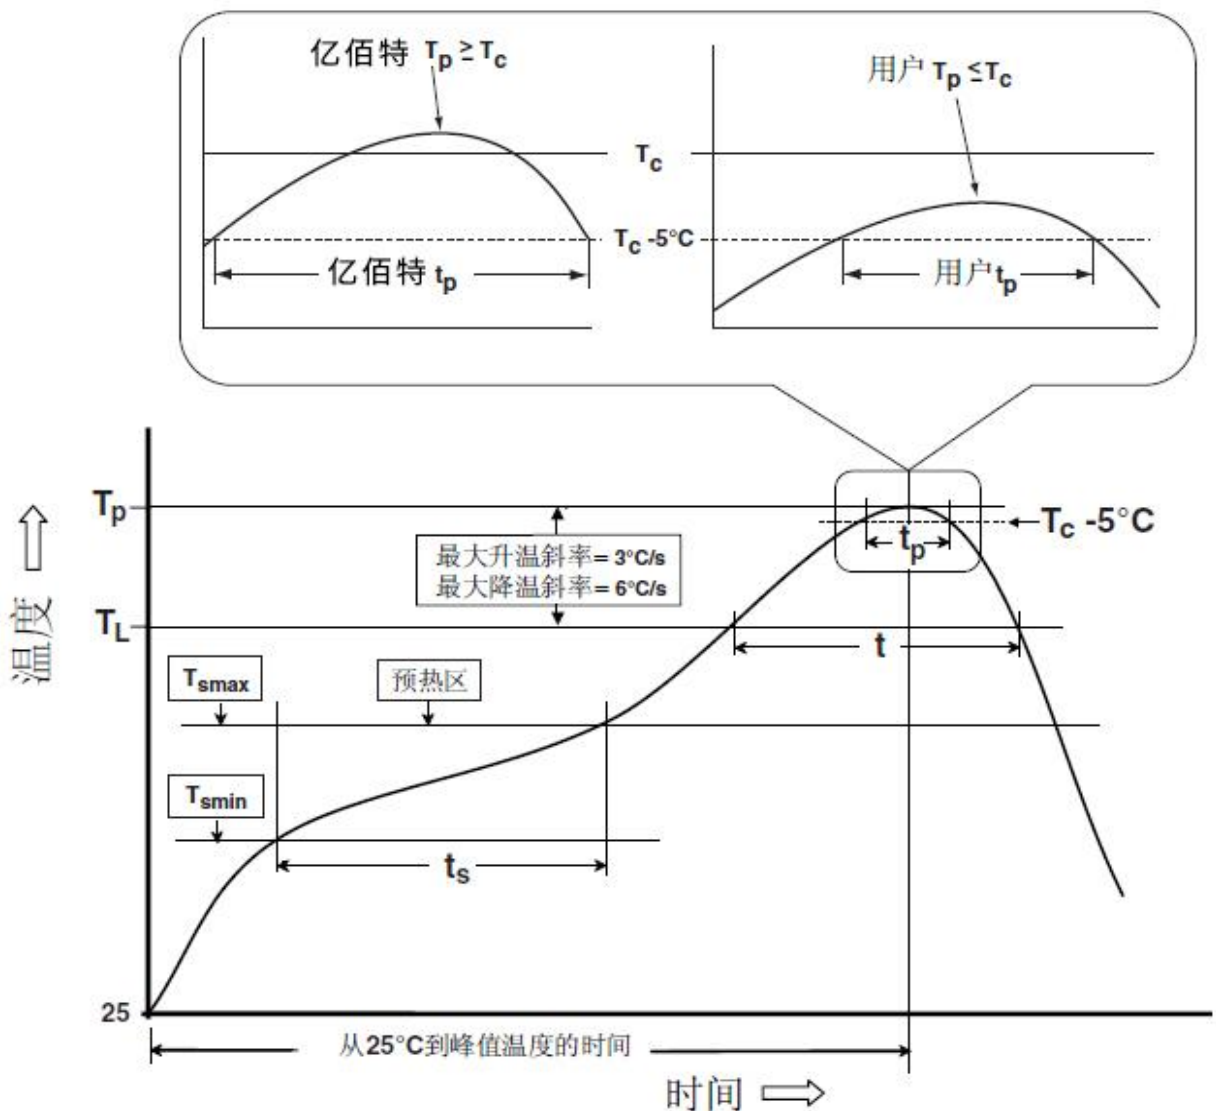

Chapter 13 Related models



Product model	Chip solutions	Carrier frequency Hz	Transmit power dBm	Test distance km	Air velocity bps	Package form	Product size mm	Antenna form
E70-433T14S	CC1310	433M	14	1.5	2.5k~168k	SMD	16 * 26	IPEX/stamp hole
E70-433T30S	CC1310	433M	30	6.0	2.5k~168k	SMD	24 * 38.5	IPEX/stamp hole
E70-433T14S2	CC1310	433M	14	1.5	2.5k~168k	SMD	14 * 20	IPEX/stamp hole
E70-900T30S	CC1310	868M	30	6.0	2.5k~168k	SMD	24 * 38.5	IPEX/stamp hole
E70-900T14S	CC1310	868M	14	1.5	2.5k~168k	SMD	16 * 26	IPEX/stamp hole
E70-900T14S2	CC1310	868M	14	1.5	2.5k~168k	SMD	14 * 20	IPEX/stamp hole

Chapter 14 Antenna Guide

14.1 Antenna Recommendations

Product model	type	Band Hz	interface	gain dBi	height mm	Feeder cm	Features
TX433-NP-4310	Flexible antenna	433M	weld	2.0	43*10	-	Flexible FPC soft antenna
TX433-JZ-5	Glue stick antenna	433M	SMA-J	2.0	52	-	Ultra-short straight, omnidirectional antenna
TX433-JW-5	Glue stick antenna	433M	SMA-J	2.0	50	-	Fixed bend, omnidirectional antenna
TX433-JZG-6	Glue stick antenna	433M	SMA-J	2.5	52	-	Ultra-short straight, omnidirectional antenna
TX433-JWG-7	Glue stick antenna	433M	SMA-J	2.5	75	-	Fixed bend, omnidirectional antenna
TX433-JK-11	Glue stick antenna	433M	SMA-J	2.5	110	-	Bendable glue stick, omnidirectional antenna
TX433-JK-20	Glue stick antenna	433M	SMA-J	3.0	210	-	Bendable glue stick, omnidirectional antenna
TX433-XPL-100	Suction cup antenna	433M	SMA-J	3.5	1850	100	Small suction cup antenna, cost-effective
TX433-XP-200	Suction cup antenna	433M	SMA-J	4.0	1900	200	Medium suction cup antenna, low loss
TX433-XPH-300	Suction cup antenna	433M	SMA-J	6.0	9650	300	Large suction cup antenna, high gain





14. 2 Antenna selection

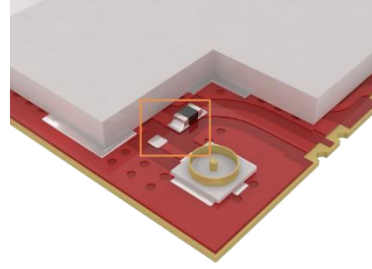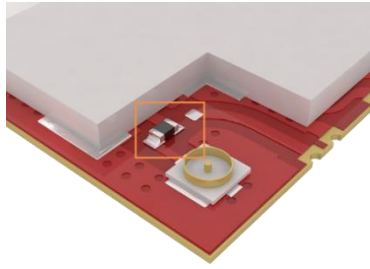

Enable IPEX interface (default) Enable the stamp hole





Chapter 15 Bulk packaging method

1 5.1 E70-433T30S bulk packaging

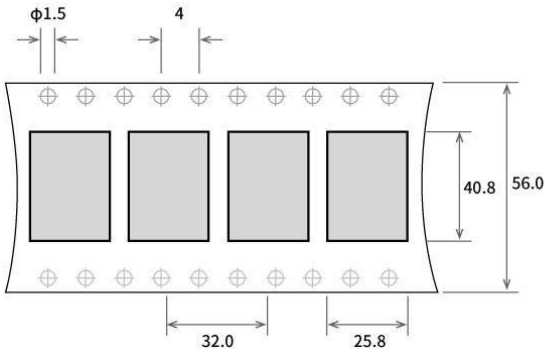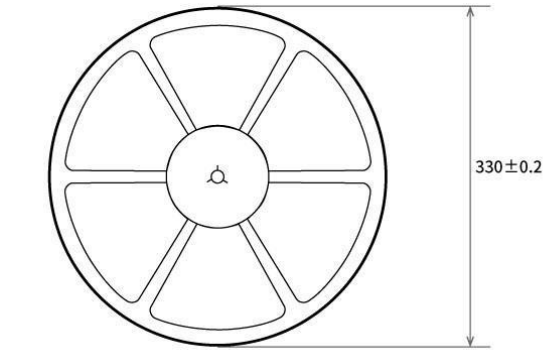


Unit: mm
Each Tray: 400 pcs

15. 2 E70-433T14S batch packing

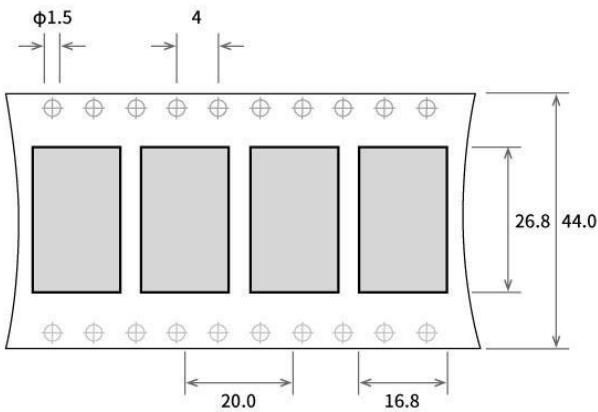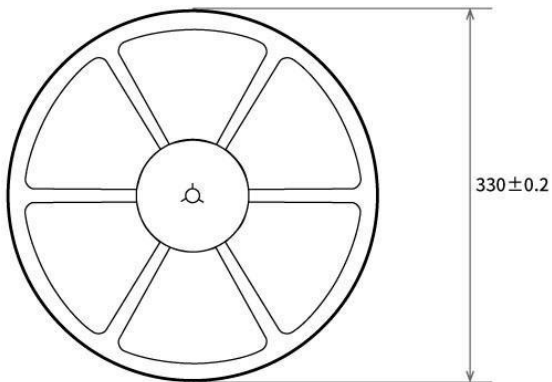


Unit: mm
Each Tray: 1000 pcs

15.3 E70-433T14S2 bulk packaging

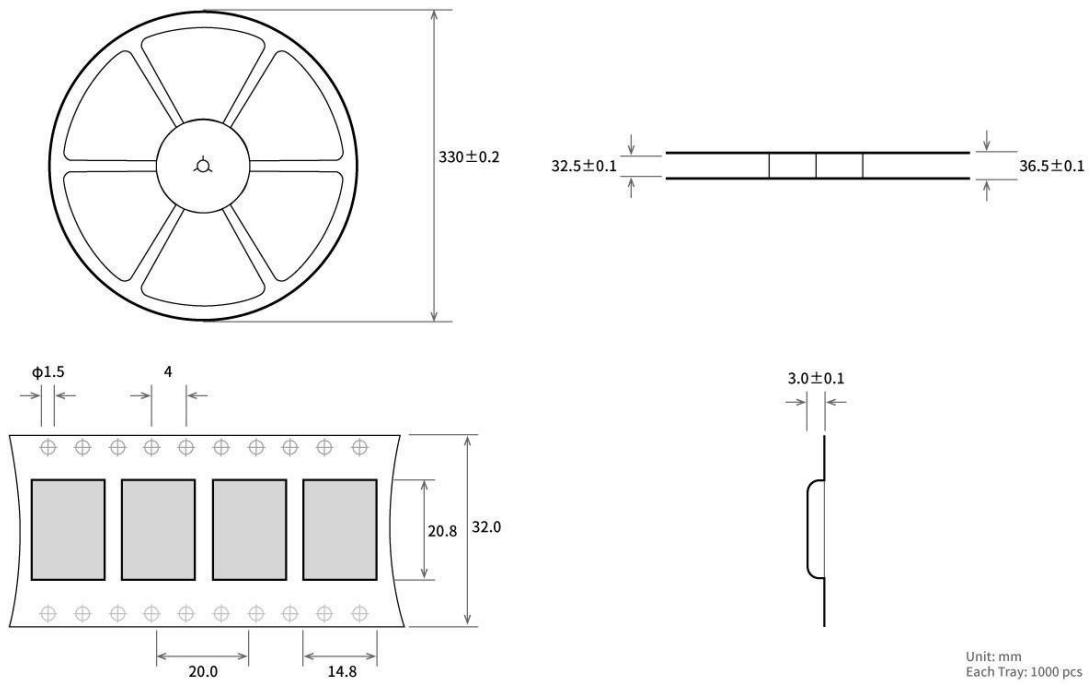

15.4 E70-433MT14S bulk packing

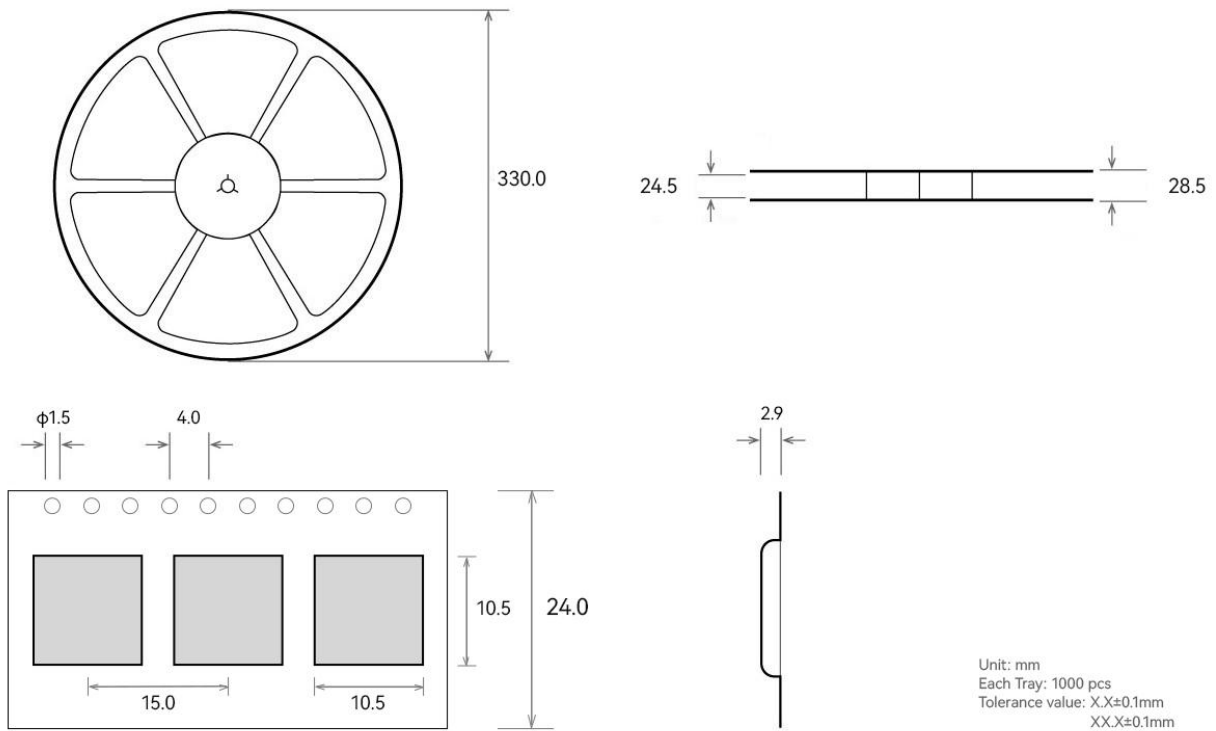

Revision history

version	Date of revision	Revision Notes	Maintainers
1.0	2022-10-22	Initial release	Hao

About us

Technical support: support@cdebyte.com

Documents and RF Setting download link: <https://www.cdebyte.com>

Thank you for using Ebyte products! Please contact us with any questions or suggestions: info@cdebyte.com

Phone: +86 028-61399028

Web: <https://www.cdebyte.com>

Address: B5 Mould Park, 199# Xiqu Ave, High-tech District, Sichuan, China

 **Chengdu Ebyte Electronic Technology Co.,Ltd.**